FLASH COVE CORNER TEMPLATE CT1


INSIDE CORNER 90 DEG. COVE HEIGHT 6" COVE STICK RADIUS 7/8" FULL SIZE 1:1

Corners C1, C2, C4, C5, C6, C8 (6 corners) in R1 - Clinic exam room, Sample Clinic

PRINT AT 100% (ACTUAL SIZE), NO SCALING, NO "FIT TO PAGE". Check the 1" square and the 100 mm bar before cutting.

OVERVIEW (NOT TO SCALE): full-size tiles on the next pages

SHEET CUT: 2 tiles

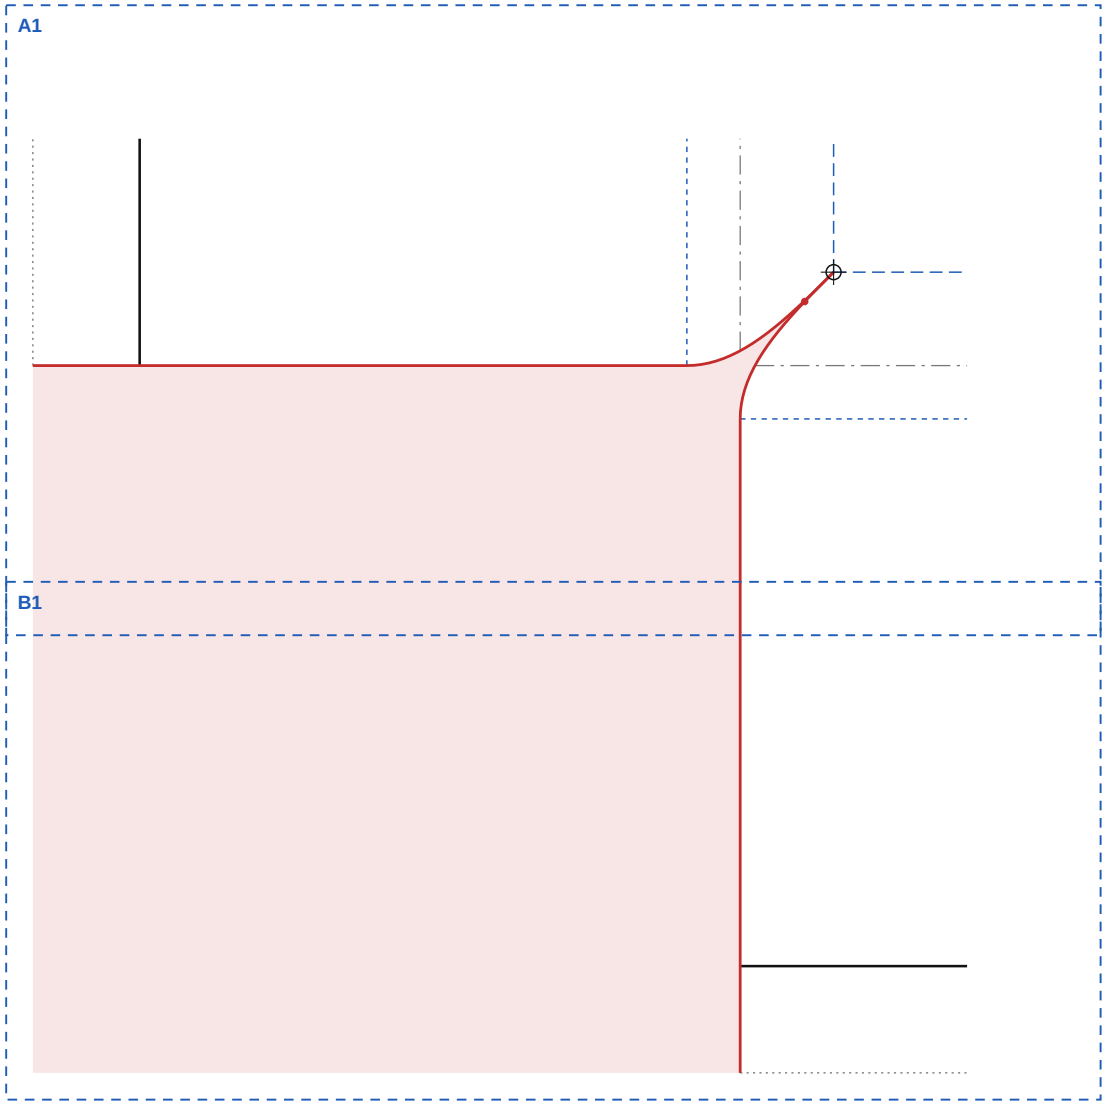


- Cap line: finish cut (under the cap strip)
- Rough cut: 1" above, trim in place
- Fold 2: top of the cove stick (wall face)
- Fold 1: where the sheet leaves the floor
- Wall line (reference)
- Cut line: the dog ear comes out

STEPS


1. Fit the sheet to the floor. The corner point is 7/8" out from both walls (the sheet maker's outside-corner template).
2. Lay the template on the sheet: corner point on the corner point, Fold 1 on the sheet's cove lines. Mark the cut lines.
3. Cut out the dog ear, starting 1/4" up from the floor (safety cut).
4. Heat, form into the corner over the cove stick, tuck under the cap.
5. The cut edges meet in the corner: groove and heat-weld (or seam-seal) the corner seam.

Geometry derived by the Flooring Designer from the cove height and stick radius (README "Flash cove corners"); method after the sheet makers' published flash cove instructions. Verify against the flooring manufacturer's installation instructions and dry-fit with scrap first.

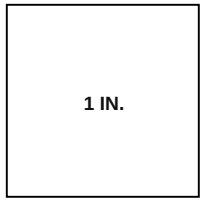

Must measure exactly 1" and 100 mm.


The square is 1" x 1"; the bar below is 100 mm (1 mm ticks). If not, the print was scaled: **do not cut from it.**

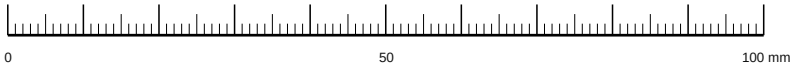

FLASH COVE CORNER TEMPLATE CT1 SHEET CUT TILE A1 OF 2

INSIDE CORNER 90 DEG. COVE HEIGHT 6" COVE STICK RADIUS 7/8" FULL SIZE 1:1

Corners C1, C2, C4, C5, C6, C8

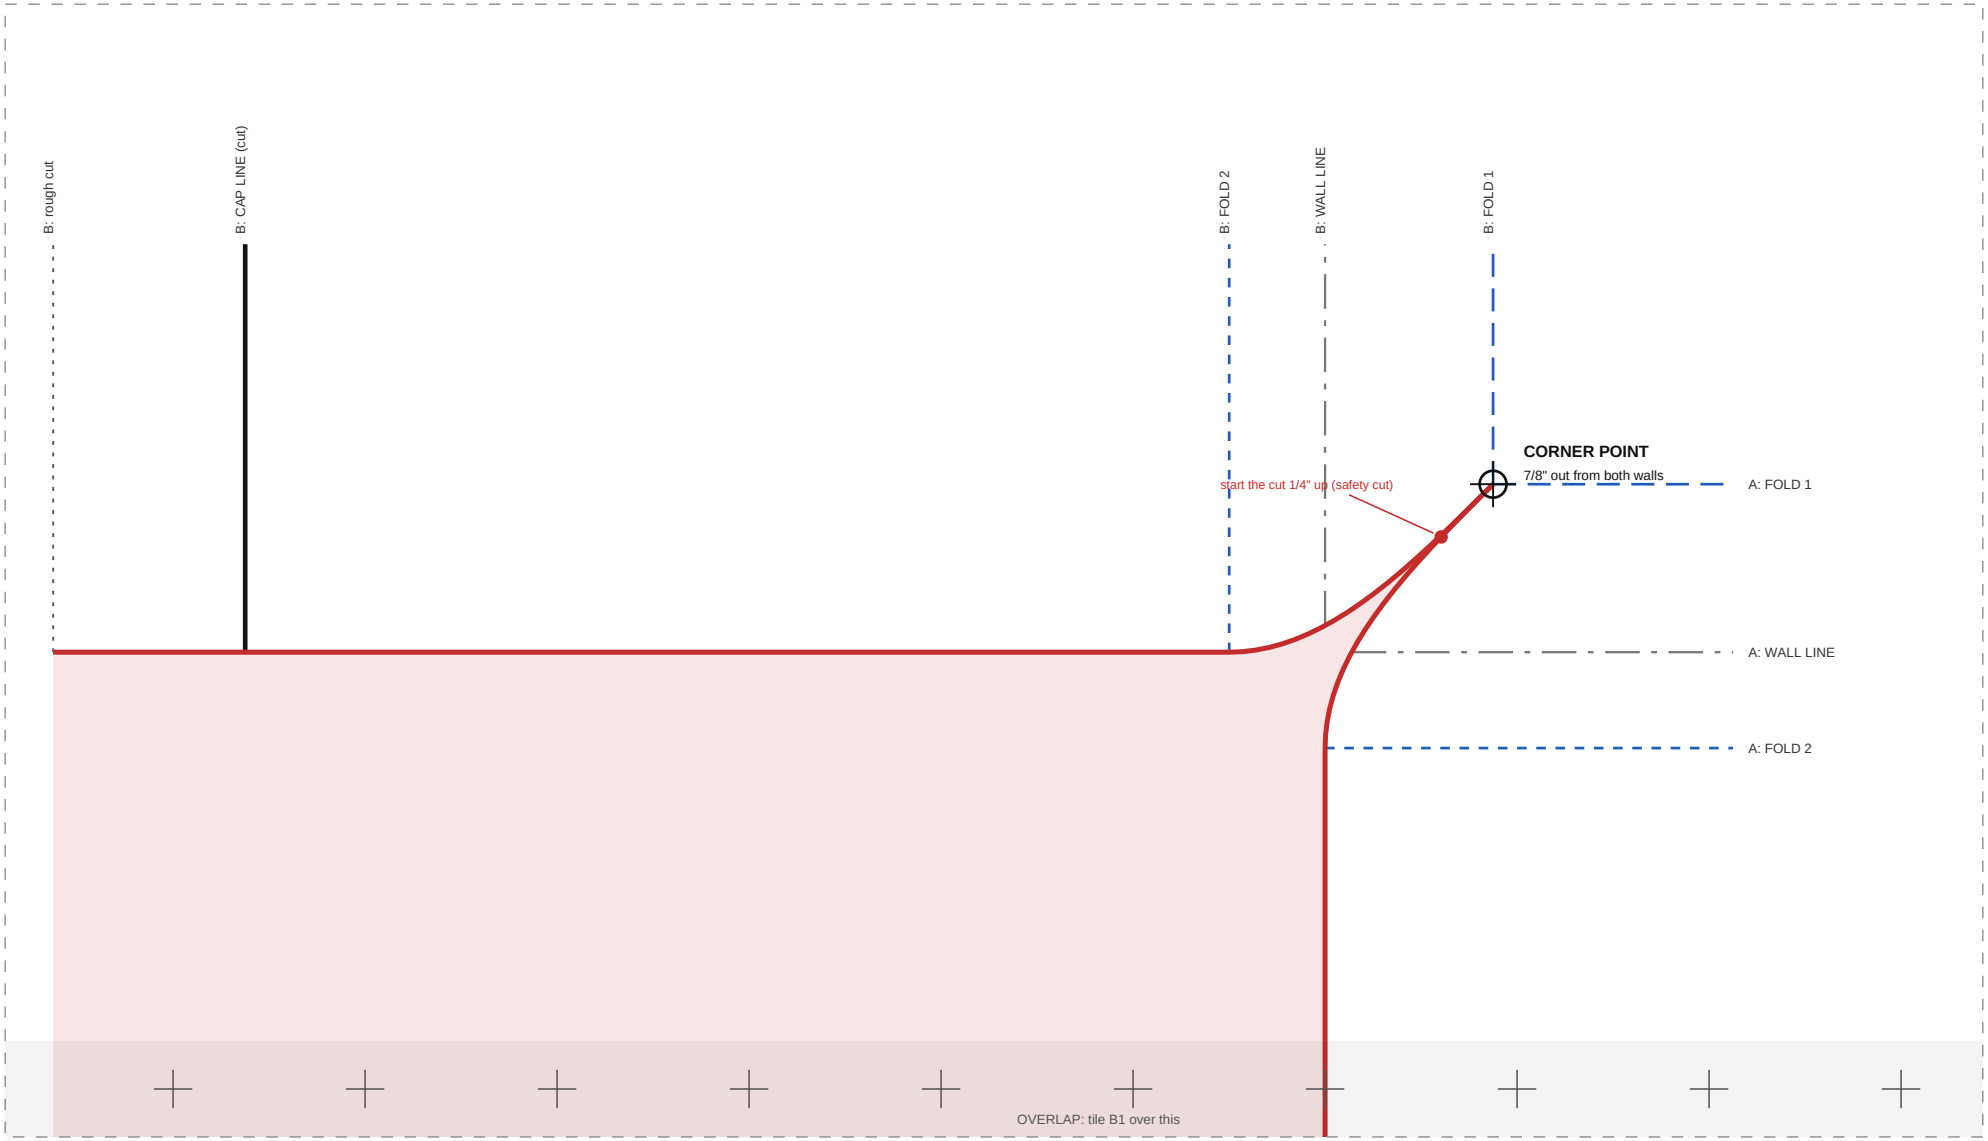

1 IN.

100 MM BAR (1 mm ticks)

0 50 100 mm

PRINT AT 100%, NO SCALING.


Must measure exactly 1" and 100 mm.

Line up the + marks and tape tiles at the shaded overlaps.

FLASH COVE CORNER TEMPLATE CT1 SHEET CUT TILE B1 OF 2

INSIDE CORNER 90 DEG. COVE HEIGHT 6" COVE STICK RADIUS 7/8" FULL SIZE 1:1

Corners C1, C2, C4, C5, C6, C8

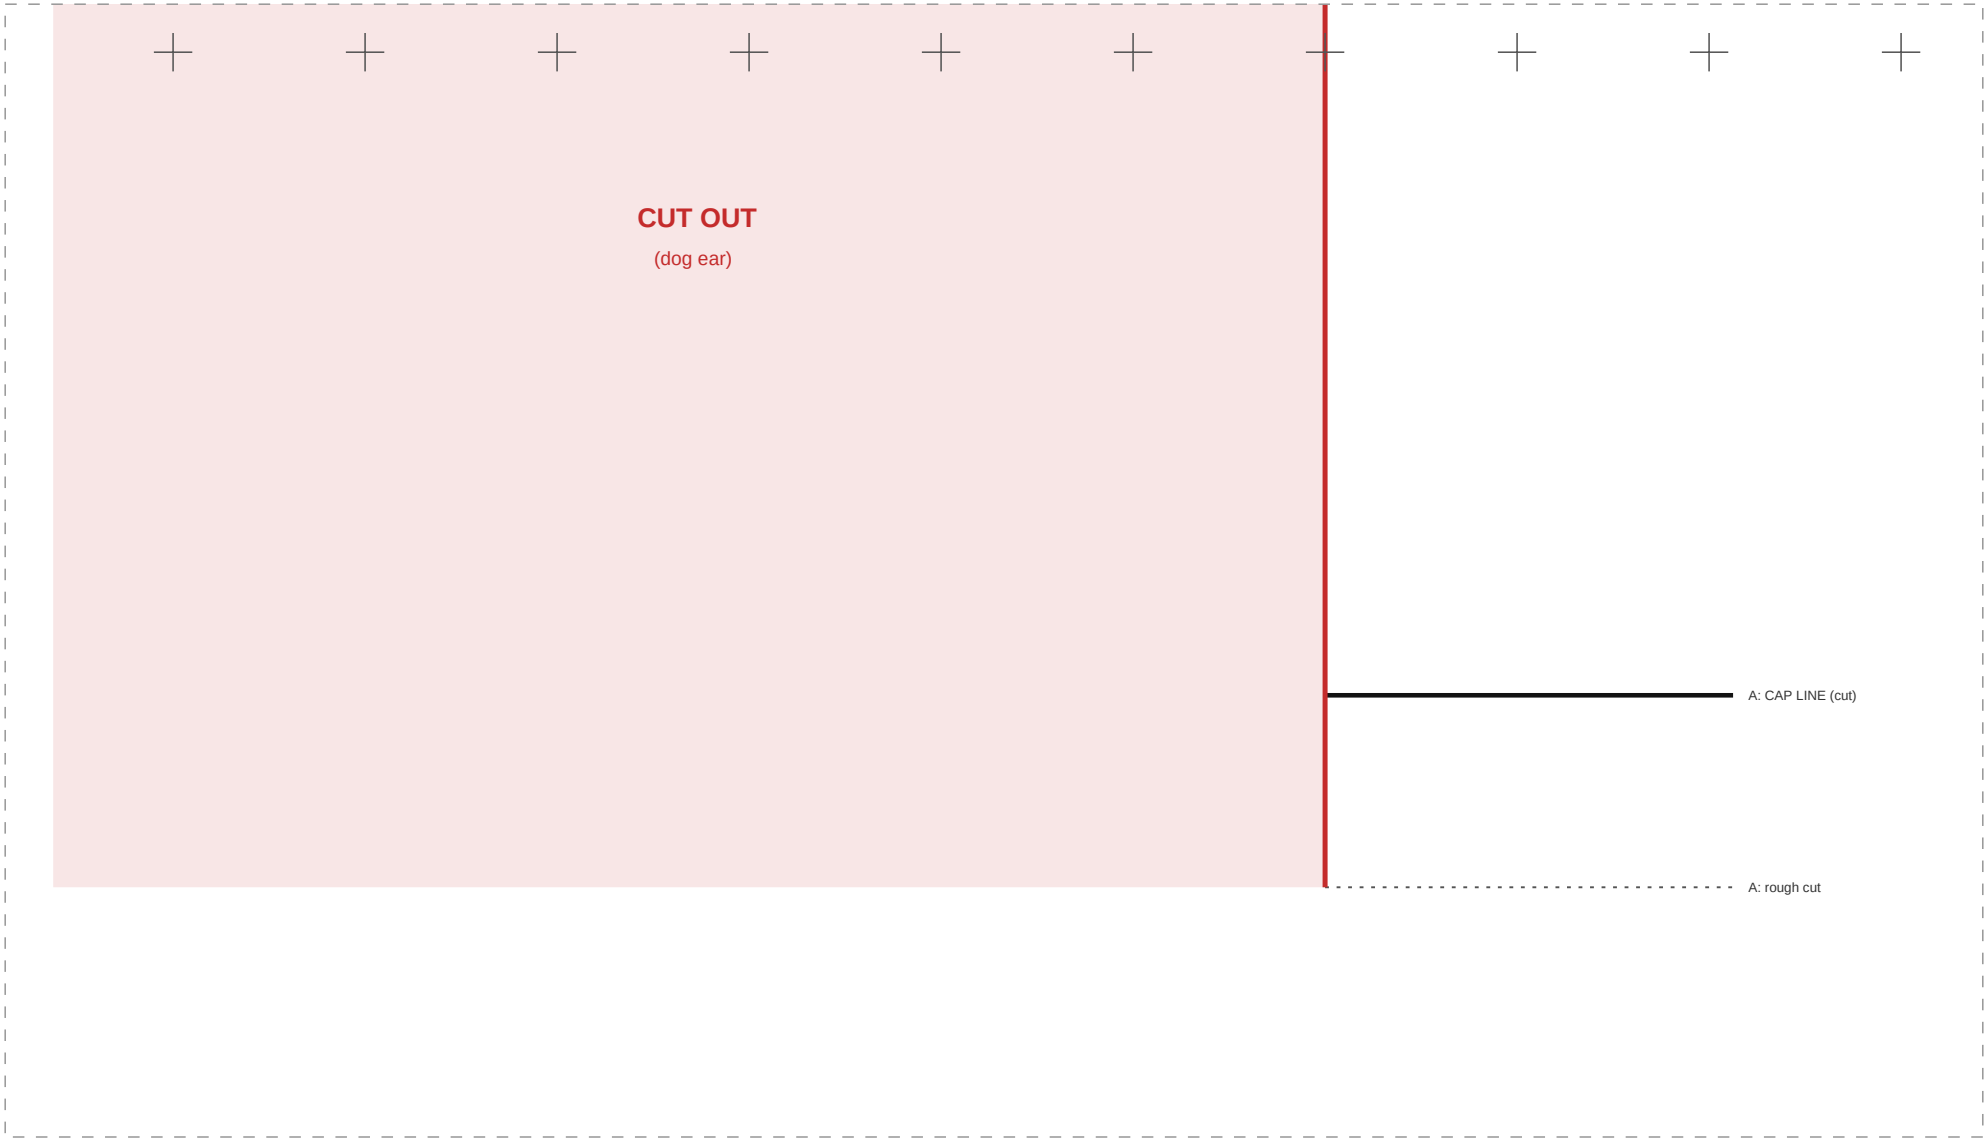

1 IN.

100 MM BAR (1 mm ticks)

0 50 100 mm

PRINT AT 100%, NO SCALING.

Must measure exactly 1" and 100 mm.

Line up the + marks and tape tiles at the shaded overlaps.

FLASH COVE CORNER TEMPLATE CT2


OUTSIDE CORNER 270 DEG. COVE HEIGHT 6" COVE STICK RADIUS 7/8" FULL SIZE 1:1

Corners C3, C7 (2 corners) in R1 - Clinic exam room, Sample Clinic


PRINT AT 100% (ACTUAL SIZE), NO SCALING, NO "FIT TO PAGE". Check the 1" square and the 100 mm bar before cutting.

OVERVIEW (NOT TO SCALE): full-size tiles on the next pages

SHEET SLIT: 2 tiles

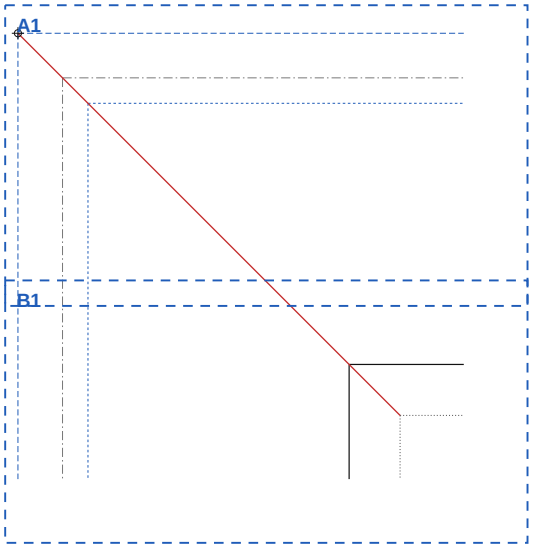

FILL PIECE: 3 tiles

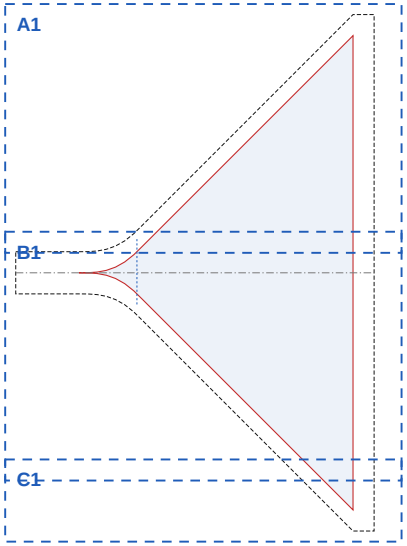

Cap line: finish cut (under the cap strip)

Rough cut: 1" above, trim in place

Fold 2: top of the cove stick (wall face)

Fold 1: where the sheet leaves the floor

Wall line (reference)

Cut line: slit on the miter / fill piece

STEPS


1. Fit the sheet to the floor. The corner point is 7/8" out from both walls.
2. Mark the slit on the miter from the corner point to the cap. Leave the floor uncut.
3. Cut the slit and form both sides up the walls: a V opens at the corner.
4. Cut the fill piece (V-plug) from the same sheet on the dashed line, fold it on its center line, heat it and set it in the V.
5. Double-cut its edges, then groove and heat-weld (or seam-seal) both seams.

Geometry derived by the Flooring Designer from the cove height and stick radius (README "Flash cove corners"); method after the sheet makers' published flash cove instructions. Verify against the flooring manufacturer's installation instructions and dry-fit with scrap first.

1 IN.

Must measure exactly 1" and 100 mm.


The square is 1" x 1"; the bar below is 100 mm (1 mm ticks). If not, the print was scaled: **do not cut from it.**

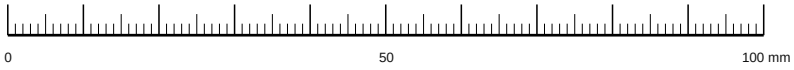


FLASH COVE CORNER TEMPLATE CT2 SHEET SLIT TILE A1 OF 2

OUTSIDE CORNER 270 DEG. COVE HEIGHT 6" COVE STICK RADIUS 7/8" FULL SIZE 1:1

Corners C3, C7

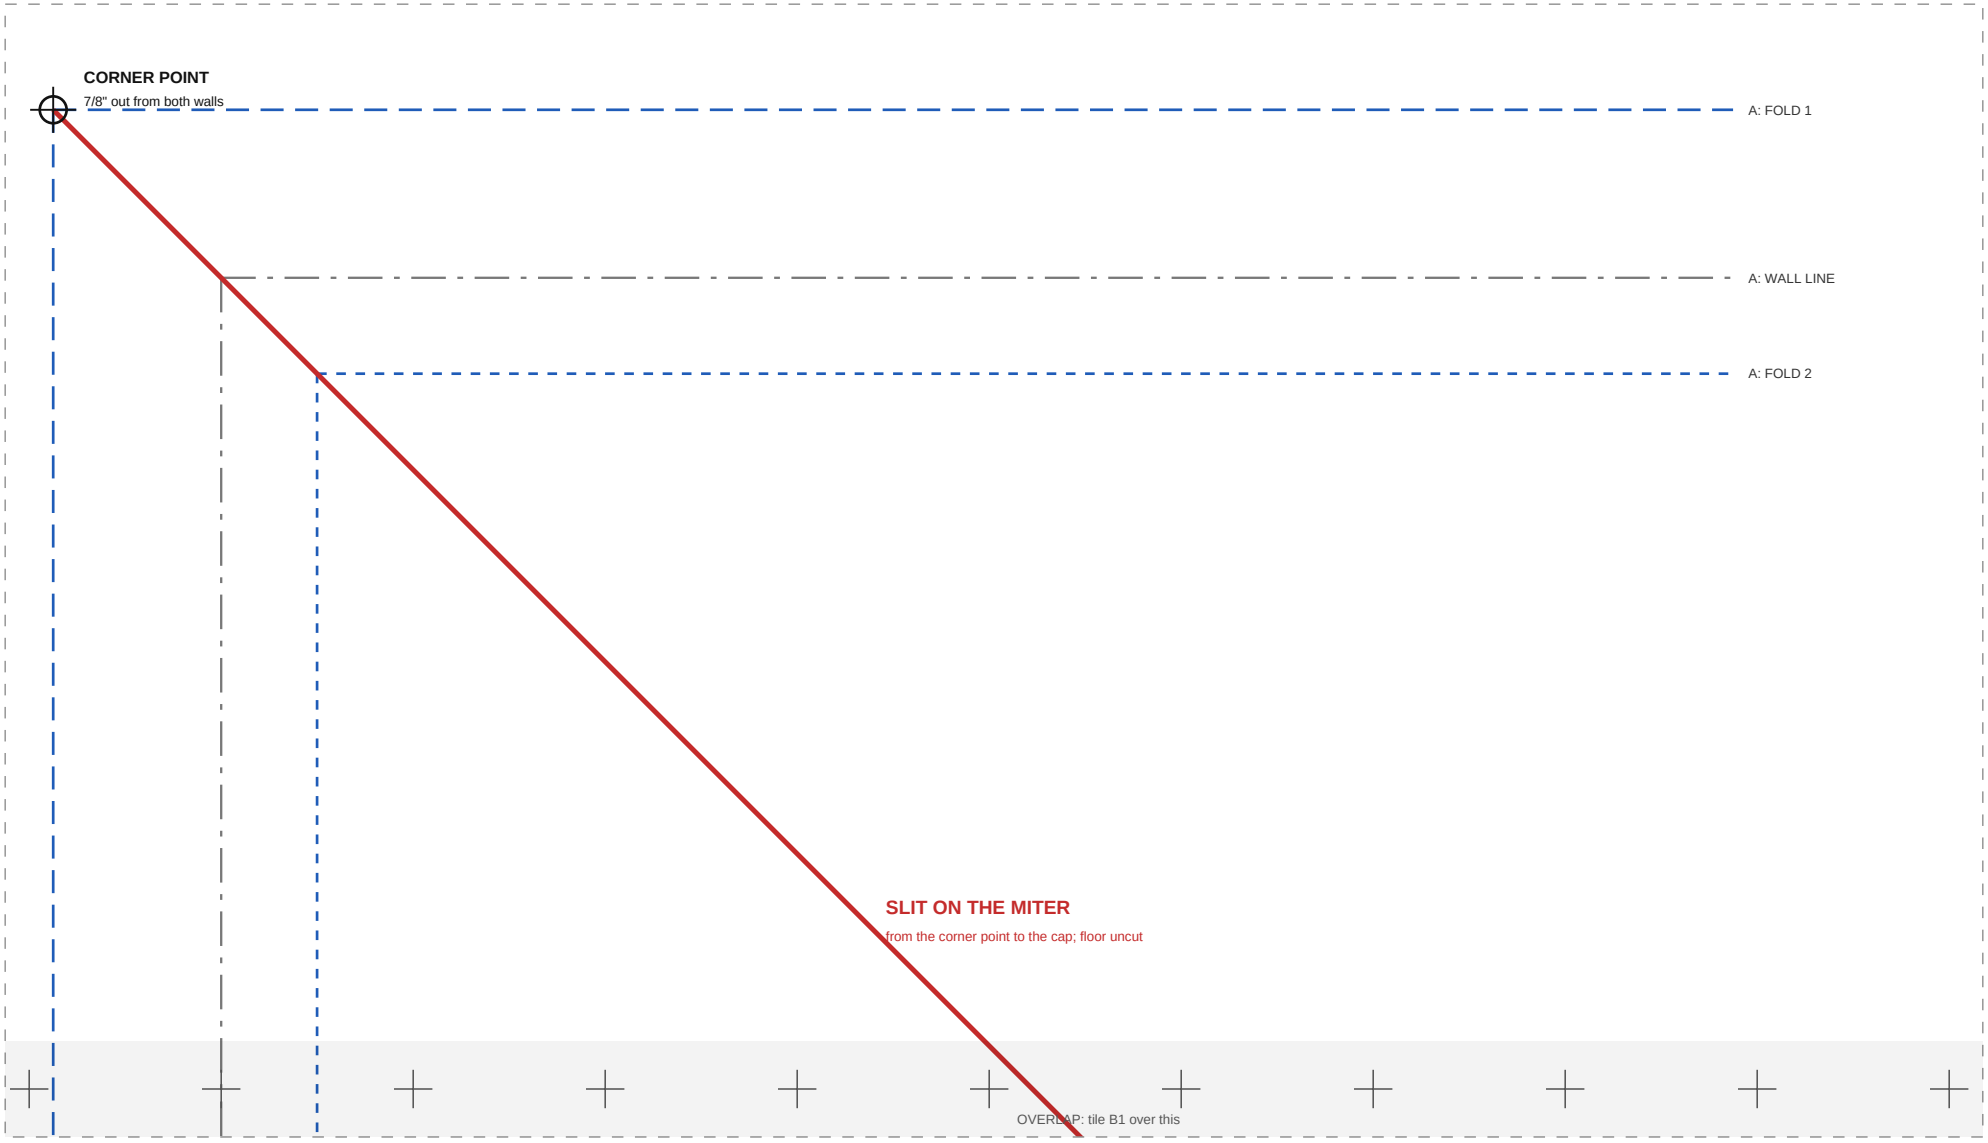

1 IN.



PRINT AT 100%, NO SCALING.


Must measure exactly 1" and 100 mm.

Line up the + marks and tape tiles at the shaded overlaps.

FLASH COVE CORNER TEMPLATE CT2 SHEET SLIT TILE B1 OF 2

OUTSIDE CORNER 270 DEG. COVE HEIGHT 6" COVE STICK RADIUS 7/8" FULL SIZE 1:1

Corners C3, C7

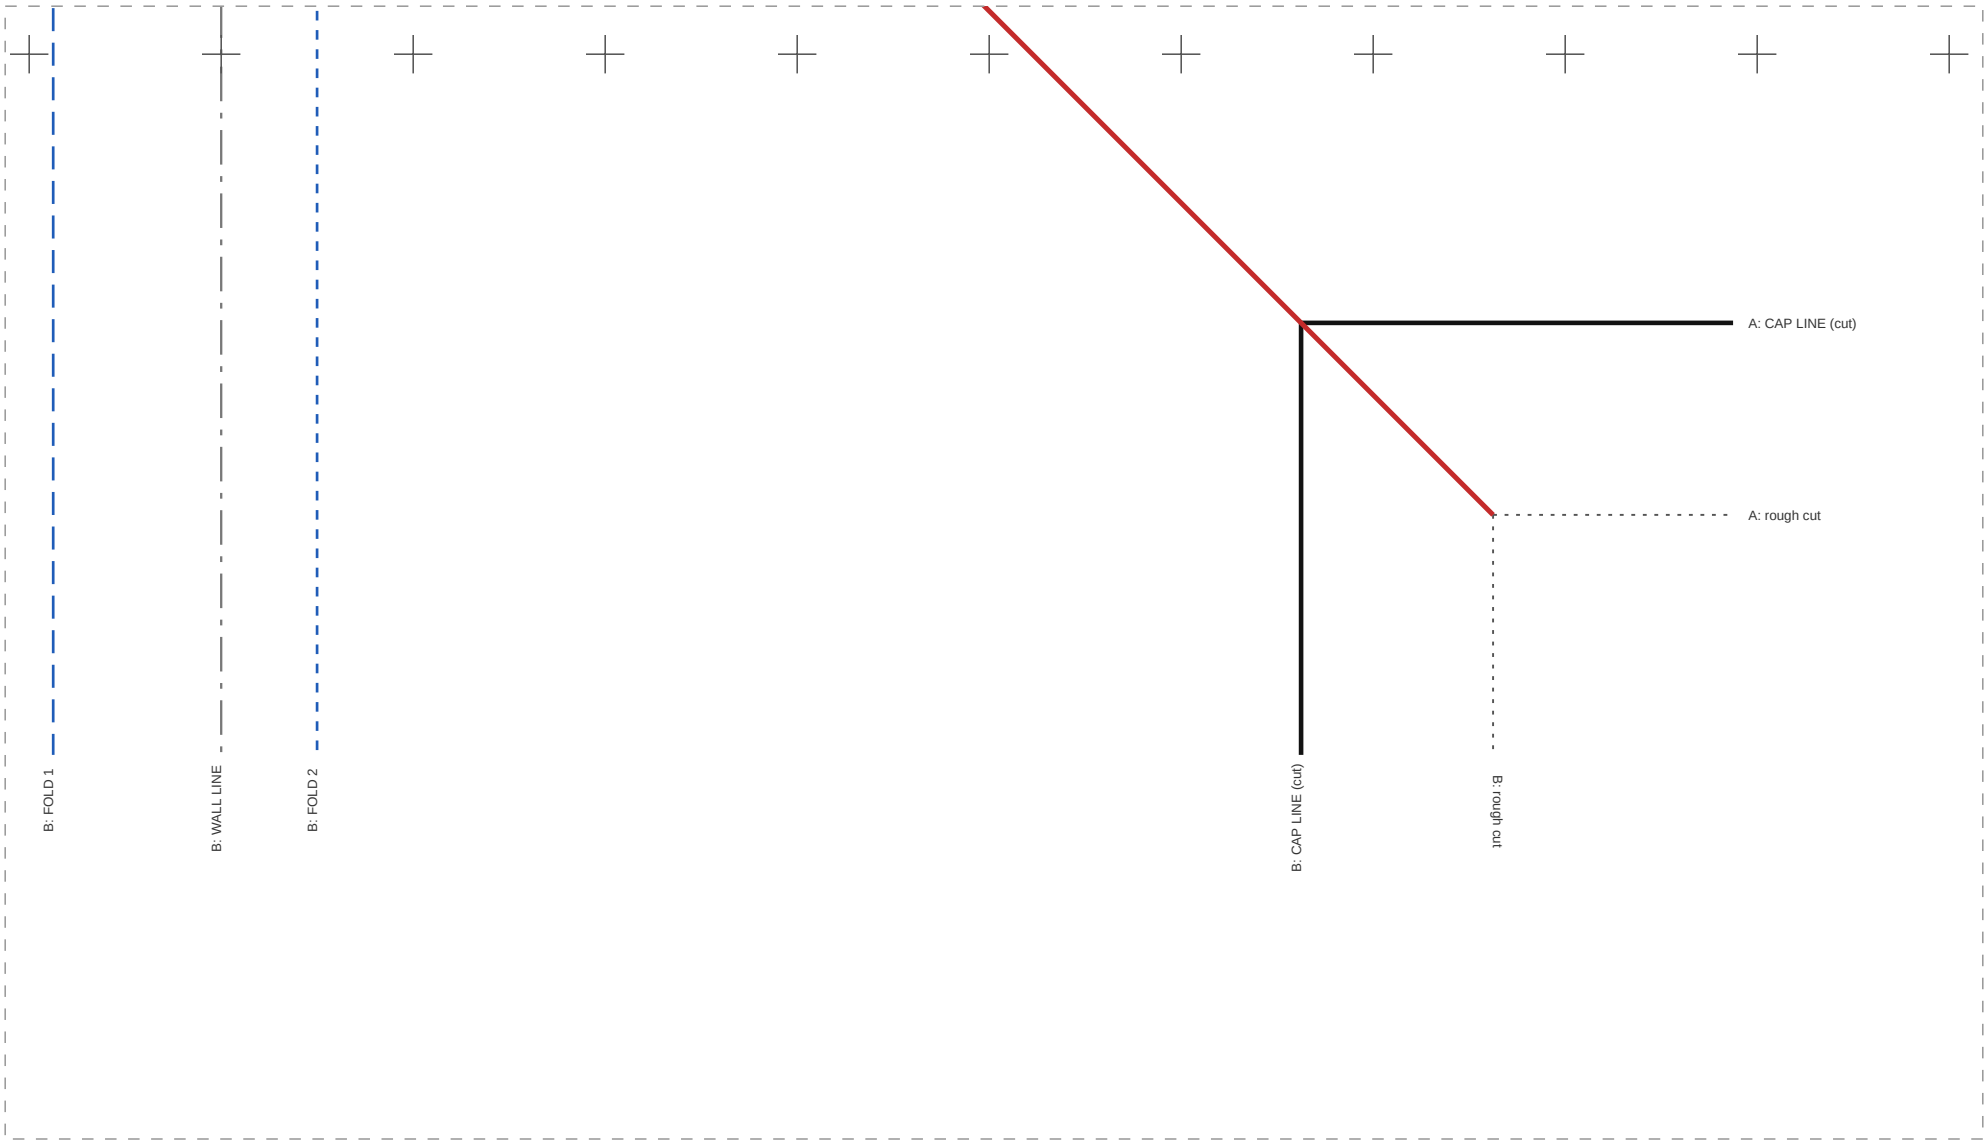

1 IN.

100 MM BAR (1 mm ticks)

0 50 100 mm

PRINT AT 100%, NO SCALING.


Must measure exactly 1" and 100 mm.

Line up the + marks and tape tiles at the shaded overlaps.

FLASH COVE CORNER TEMPLATE CT2 FILL PIECE TILE A1 OF 3

OUTSIDE CORNER 270 DEG. COVE HEIGHT 6" COVE STICK RADIUS 7/8" FULL SIZE 1:1

Corners C3, C7

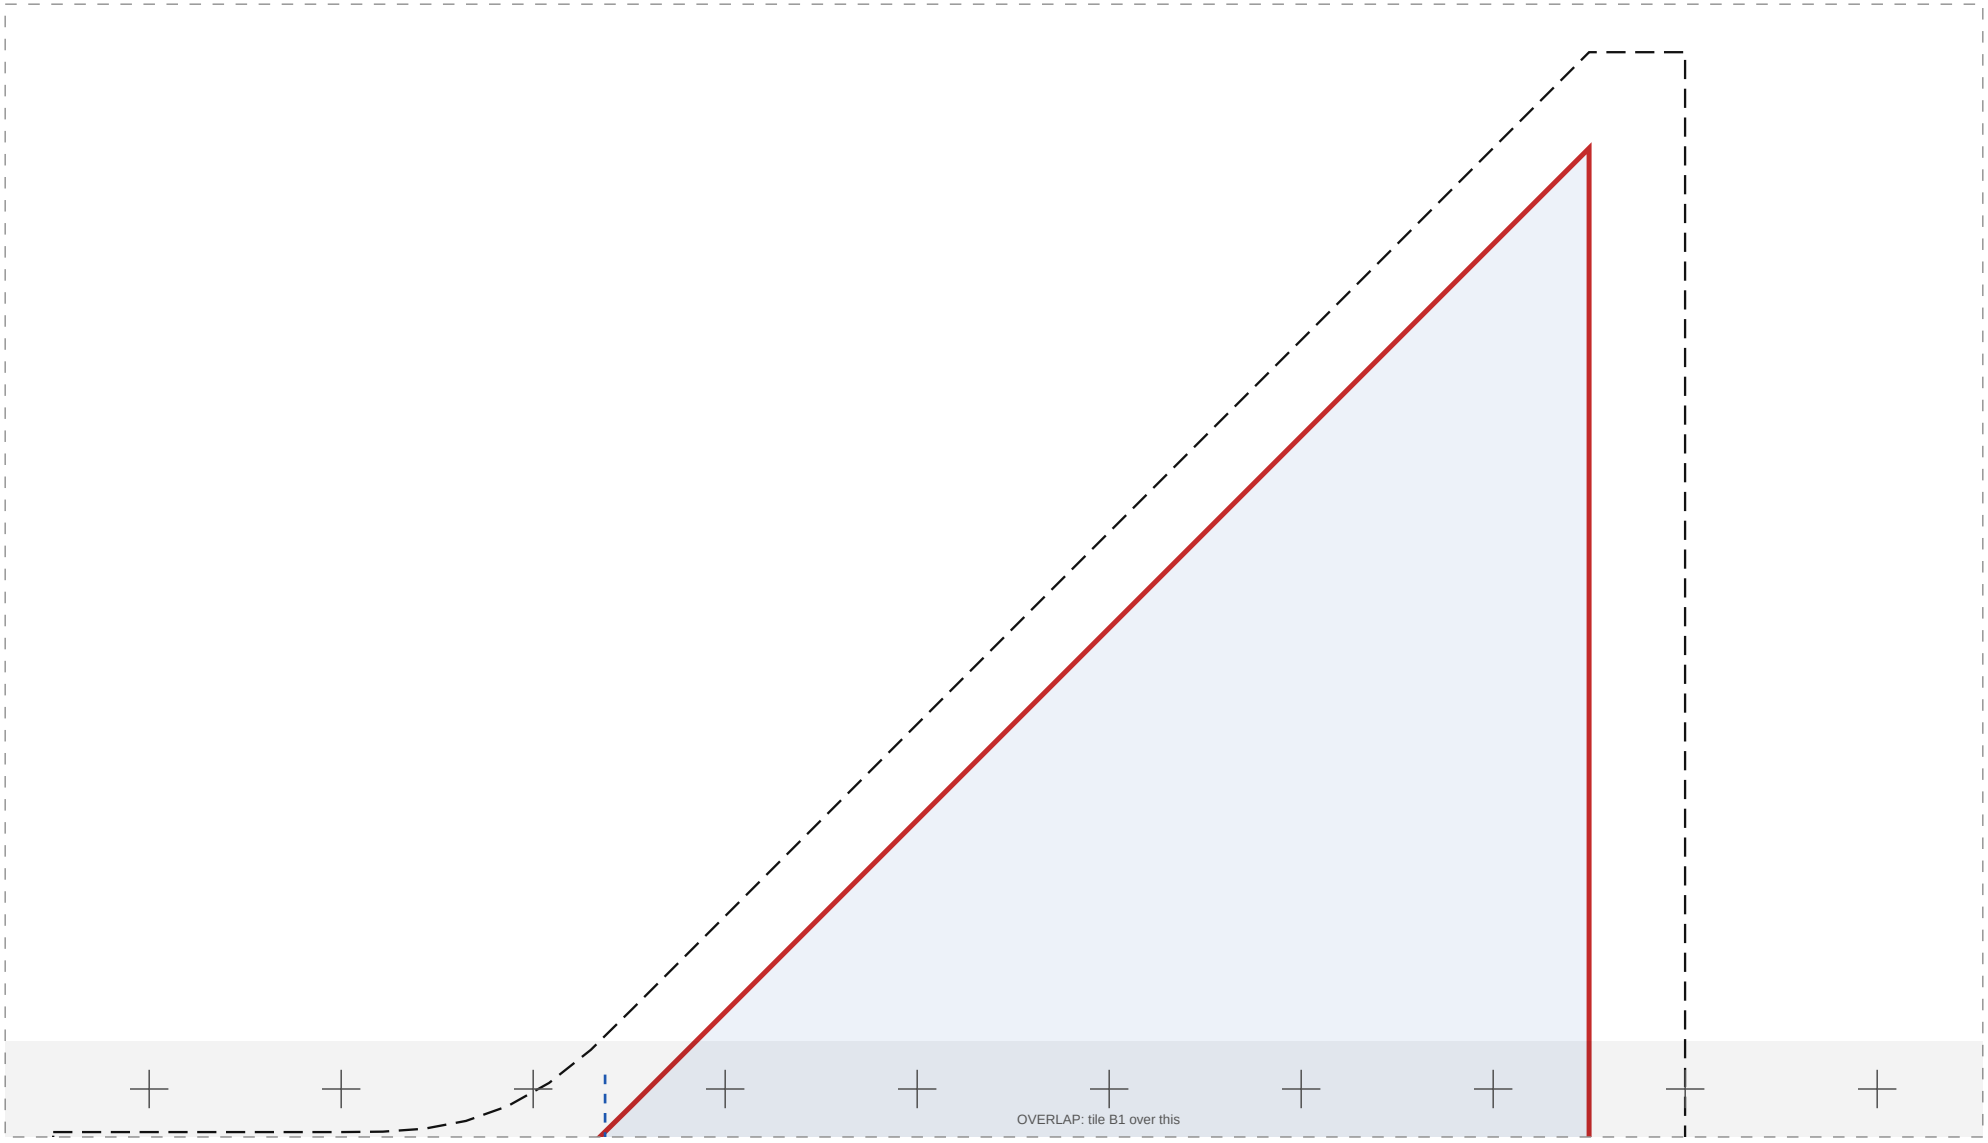

1 IN.

100 MM BAR (1 mm ticks)

0 50 100 mm

PRINT AT 100%, NO SCALING.


Must measure exactly 1" and 100 mm.

Line up the + marks and tape tiles at the shaded overlaps.

FLASH COVE CORNER TEMPLATE CT2 FILL PIECE TILE B1 OF 3

OUTSIDE CORNER 270 DEG. COVE HEIGHT 6" COVE STICK RADIUS 7/8" FULL SIZE 1:1

Corners C3, C7

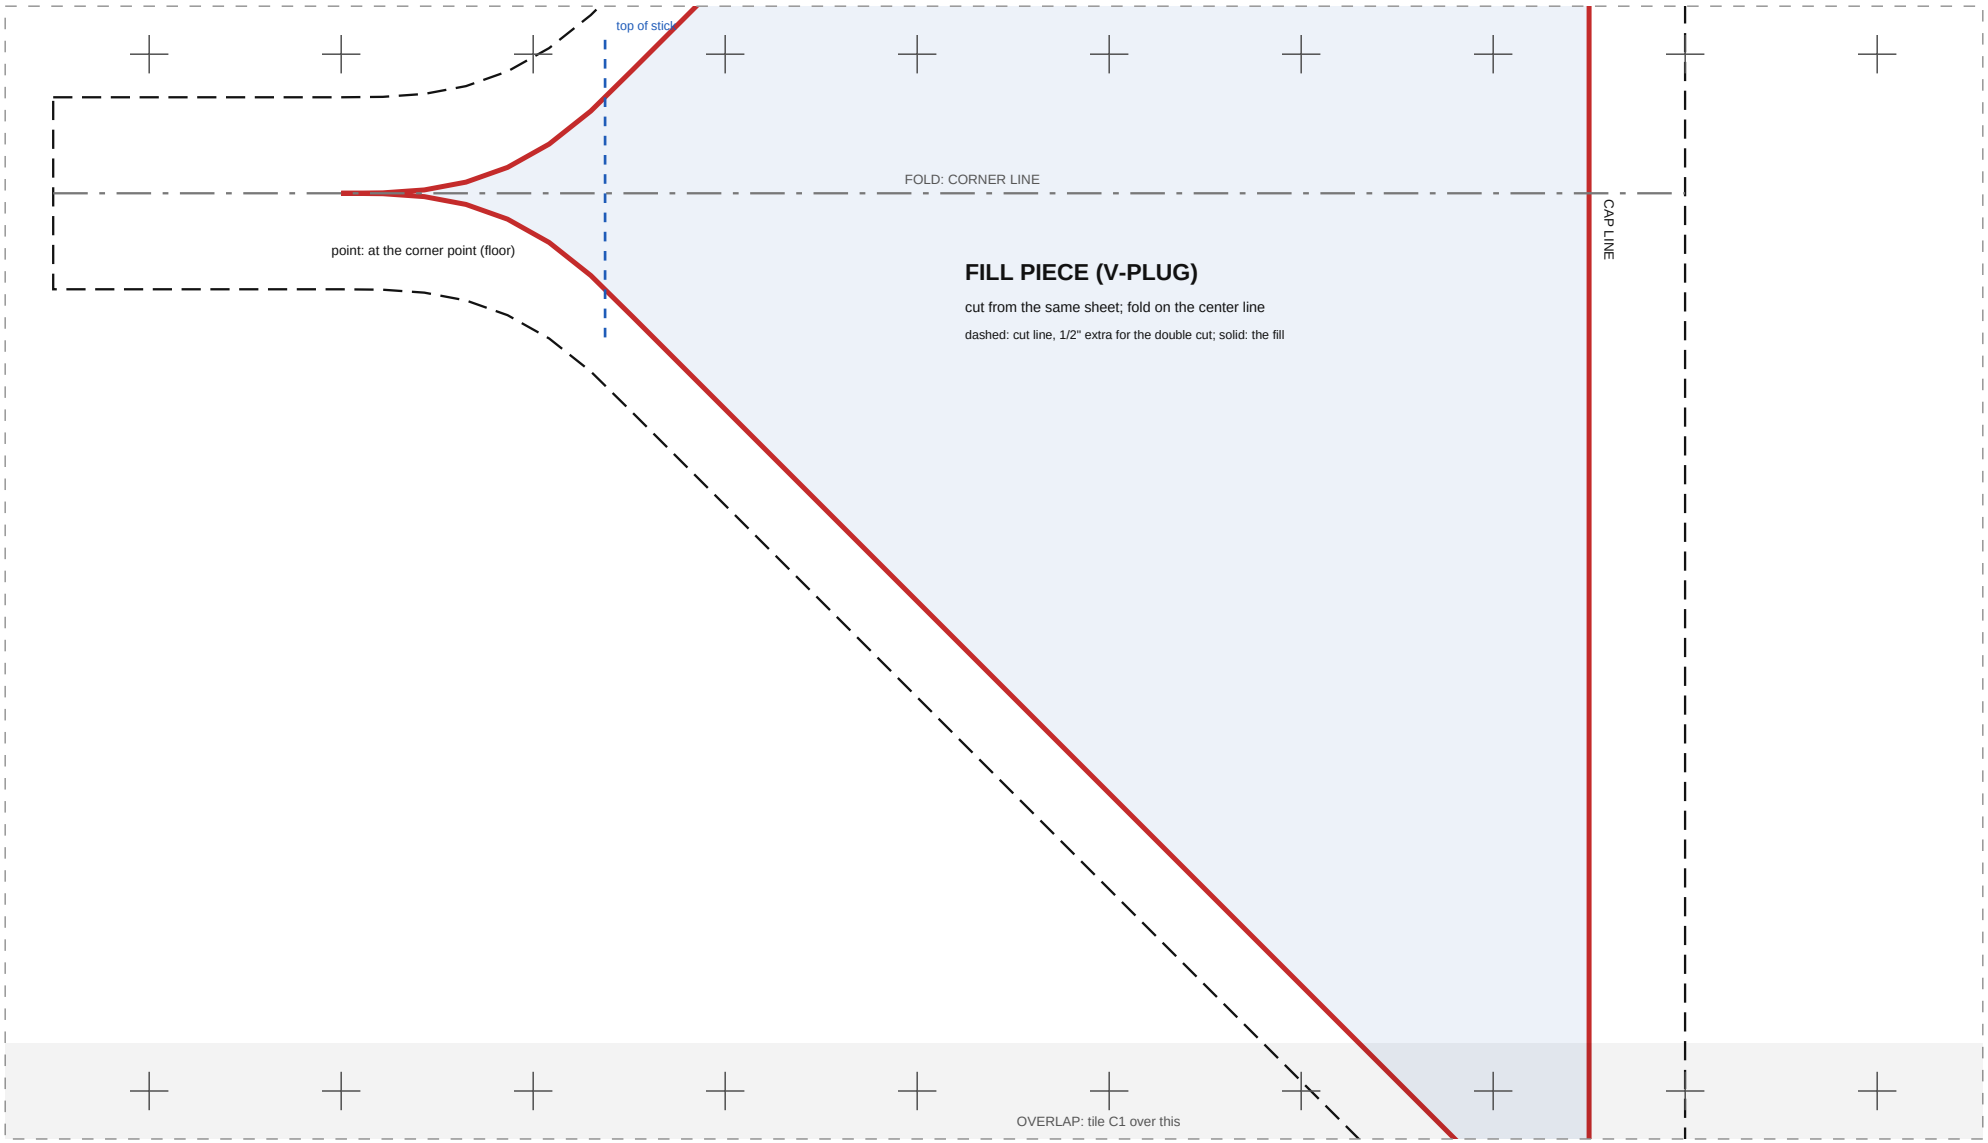

1 IN.

100 MM BAR (1 mm ticks)

0 50 100 mm

PRINT AT 100%, NO SCALING.


Must measure exactly 1" and 100 mm.

Line up the + marks and tape tiles at the shaded overlaps.


FLASH COVE CORNER TEMPLATE CT2 FILL PIECE TILE C1 OF 3

OUTSIDE CORNER 270 DEG. COVE HEIGHT 6" COVE STICK RADIUS 7/8" FULL SIZE 1:1

Corners C3, C7

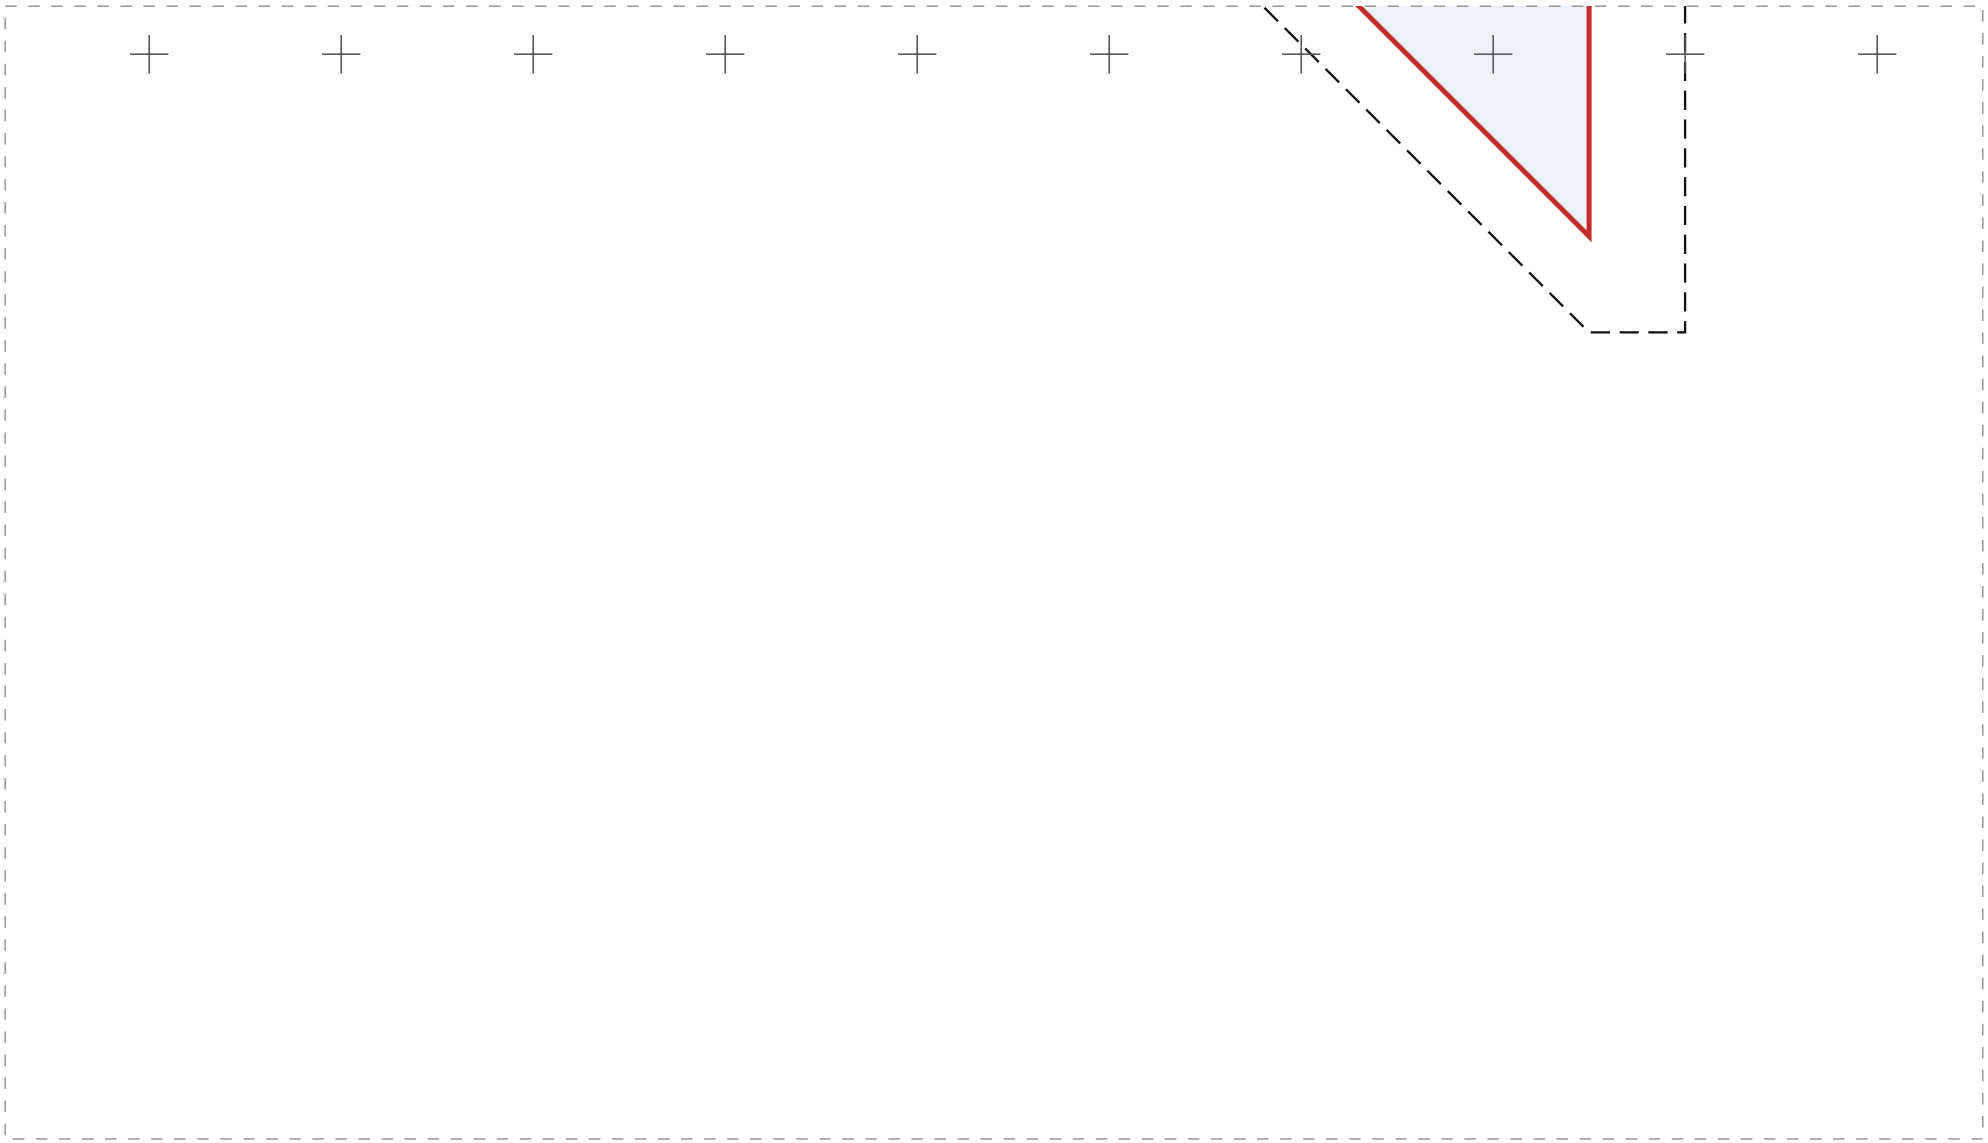

1 IN.



PRINT AT 100%, NO SCALING.

Must measure exactly 1" and 100 mm.

Line up the + marks and tape tiles at the shaded overlaps.